


201-277-A0 Calibration

WEIGH IN THE CAB WITH THE APP

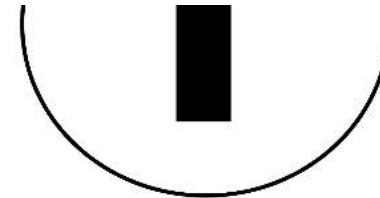

TRUCK-TECH UK LTD
ONBOARD WEIGHING

TRUCK-TECHUK LTD UNIT 6B WHARF ROAD EALAND Nr SCUNTHORPE NORTH Lincs DN14 4JW

INFO@TRUCK-TECHUK.CO.UK – 01427 875 800

Calibrate on a certified flat level weighbridge for accuracy.

This is a dual channel system which indicates front & rear loads to monitor load weight distribution and the & vehicle GROSS. The app will also display the Net weight. The digital gauge will display front, rear, & GROSS weight.

Calibration requires the empty front and rear weights entering (the tare weight) & then repeat with a full capacity load. This can be completed in any order loaded then empty or empty then loaded.

Follow the steps below to calibrate.

- 1 Drive steer axle onto the weighbridge & record this weight



- 2 Drive forward or reverse onto the weighbridge leaving just the drive axles on & record this weight.



3



When calibrating the scale first press the blue menu button to select the correct axle group to calibrate

1 = The unit axles & 2 = the trailer axles this number appears in the bottom left corner of the screen.

4



To enter the weights: Press and hold C Low or C High for 3 seconds until you see CL or CH appear on the screen.


Use button 2 (**LOW**) to enter the EMPTY axle weights.

Use button 1 (**HIGH**) to enter the LOADED axle weights.

5



Use the up and down keys 3 & 4 to adjust the digits up or down to enter the correct weight.

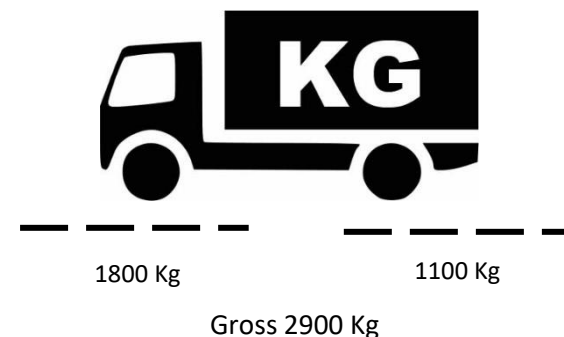

Now repeat steps 1 to 5 with a fully loaded vehicle at maximum load.

For best results weigh on firm level ground, briefly release brakes to ensure suspension is fully inflated. System is for guide use only.